

INSTALLATION AND OPERATING INSTRUCTIONS FOR:



- Input Voltage** 120-277Vac 50/60Hz 120-347Vac 50/60Hz
Output Power 8W 15W 20W 30W
Output Voltage 25-50Vdc 51-80Vdc 81-155Vdc 156-230Vdc

INCLUDED IN THE BOX	QUANTITY
LED Emergency Driver	1
External Battery	1
Test Button	1
Installation Sheet	1

Note: Install requires application of the Luminaire Modification Label provided, as per UL. This label includes the statement: "This equipment has more than one power supply connection point." This label must be applied to the fixture housing during installation.

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

WARNING: Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when drilling for installation of LED Emergency Driver. Check for enclosed wiring and components.

WARNING: Risk of fire or electric shock. This LED Emergency Driver installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.

WARNING: Risk of fire or electric shock LED Emergency Driver is only for use in surface mount or recessed Type IC or Non-IC luminaires listed to UL Standards. Suitable for use in damp locations and plenum spaces. Not for use in heated air outlets or hazardous locations.

WARNING: Risk of fire or electric shock. Do not alter, relocate, or remove wiring, lampholders, power supply, or any other electrical component.

WARNING: To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

WARNING: Do not make or alter any open holes of the wiring enclosure or electrical component enclosure during installation. Only those open holes indicated in the instructions and/or drawings may be added or altered as a result of LED Emergency Driver installation. Do not leave any other open holes in the wiring enclosure or electrical component enclosure during installation.

CAUTION: Before installing, make certain the AC power to the fixture is off.

CAUTION: The electrical rating of this product is 120-277V Or 120-347V. Installer must confirm that there is 120-277V or 120-347V at the fixture before installation.

This emergency LED driver shall be enclosed by the LED luminaire and bonded to the grounding of LED luminaire (via green grounding wire attached to driver).

Do not use outdoors.

Do not let power supply cords touch hot surfaces. Do not mount near gas or electric heaters.

Use caution when handling batteries. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or in eyes, flush acid with fresh water and contact a physician immediately.

Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.

Do not use this equipment for other than intended use.

SAVE THESE INSTRUCTIONS

INSTALLATION

1. Warning

Read and understand all warning and notes stated above, before proceeding with installation.

2. Fixture Compatibility & Applications

The EDB series emergency driver can be used with most LED loads that have a forward voltage requirement between 25-230Vdc. Verify AC driver in the fixture output voltage per driver manufacturer specifications. Verify LED load has a forward voltage requirement between 25-50Vdc, 51-80V, 81-155V, or 155-230V. Confirm that the emergency driver selected does not exceed the power delivered to the LED under normal operation from the AC driver.

These emergency packs have been evaluated to and found compliant to UL 924. The emergency driver assembly is accepted as a component of a luminaire where the suitability of the combination shall be determined by UL. The as-installed performance of the system must meet or exceed all Federal, State, and Local code requirements.

Specification Chart

Rated Output Power	Nominal Lumen Output*
8W (Constant)	800 Lumens
15W (Constant)	1500 Lumens
20W (Constant)	2000 Lumens
30W (Constant)	3000 Lumens

* Nominal lumen output is based on a standard LED fixture rated efficacy (lumens per watt, lm/w) of 100 lm/w.

Multiply lm/w by Rated Output Power of emergency driver to determine lumen output of fixture during emergency operation. To calculate actual minimum lumen output of fixture under emergency operation:

a. Determine the fixture efficacy under normal AC operation, based on fixture manufacturer published data, in lumens per watt (lm/w).

1. Reference DLC QPL (www.designlights.org) for rated data on fixture efficacy. If fixture is not found on DLC QPL, contact fixture manufacturer.

b. Multiply fixture lm/w by rated output power of emergency driver. (Example: 104 lm/w x 5W = 520 lumens.)


3. Determining Adequate Egress Lighting Levels

Follow industry standards by utilizing available .ies files and lighting design software for your dedicated emergency luminaires, with the above calculated emergency lumens, and validate your as-installed plans in accordance with the applicable life safety codes governing your project

While these products are compliant with the requirements of UL standard 924, it is ultimately the responsibility of the designer/specifier to assure the as-installed system delivers code compliant path of egress illumination in accordance with federal, state or local municipal requirements.



4. Wiring

Complete wiring as indicated below. Install in accordance with National Electric Code. Emergency driver and AC Driver must be on the same branch circuit. Ensure hot / live lead going to the black wire on the Emergency LED driver is Un-Switched. When used with switched fixtures, the emergency driver must be wired ahead of the switch. (See Figure 1.)

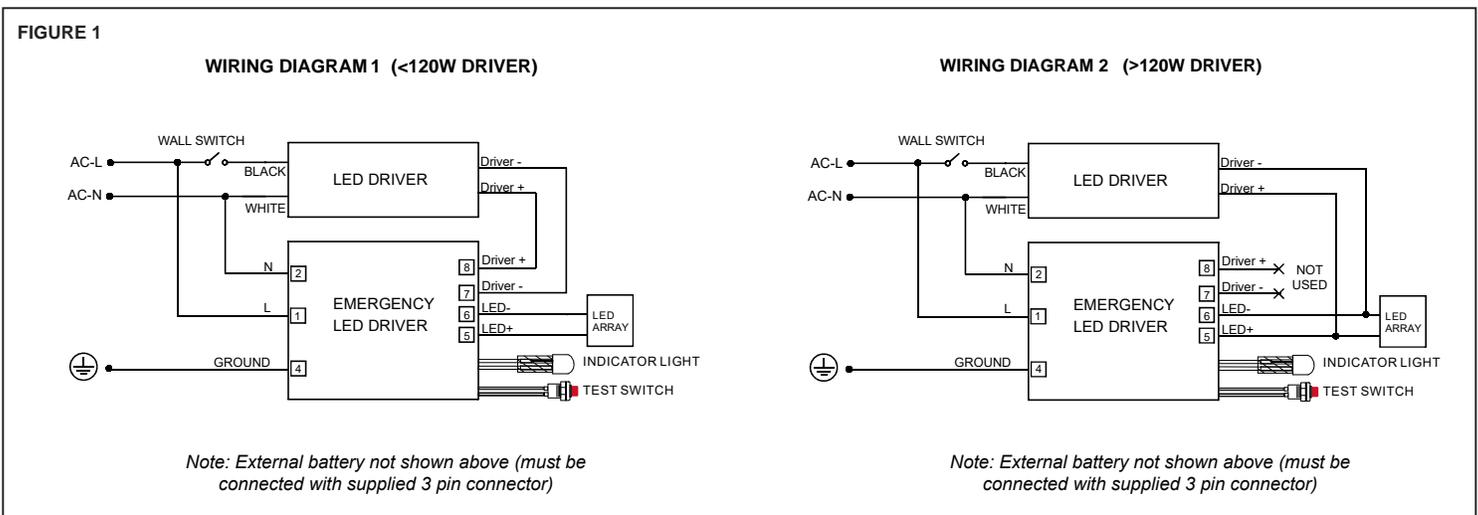

5. Mounting

Pre-Drill one 1/2" hole into the fixture ballast cover / wire-way cover for the test switch. (See Figure 1.) Determine appropriate location for the Battery and LED Emergency Driver in the fixture. Install the components in the fixture using existing mounting holes in fixture or make new holes as needed.

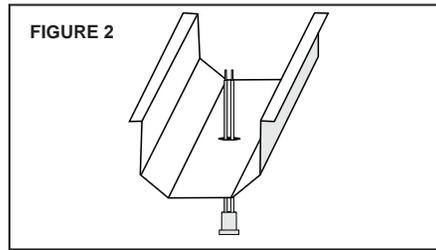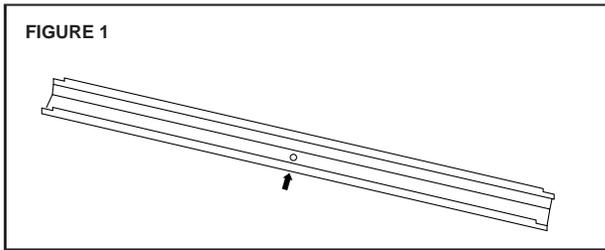

6. Complete Installation

When the installation is complete, verify all necessary connections have been made and switch the AC Power on

7. Operation

Emergency Mode: When the AC power goes out, the emergency pack detects the power outage and automatically switches to emergency mode. The LED load is illuminated, for a minimum of 90 minutes. When AC power is restored, the emergency driver switches back to normal operating mode and starts re-charging.

8. Test Switch

During normal operation, pressing the test switch will switch the driver into emergency mode. If the emergency driver is discharging, pressing the switch button will switch the battery off.

9. Self-Diagnostic

The integrated self-diagnostic circuitry will automatically conduct monthly 30-second and annual 90-minute tests to verify proper emergency capability per Life Safety Code requirements. Press the test button to cut the power to the AC driver and switch the system to emergency mode. Release the test button to return to normal mode. Switch off the circuit breaker to simulate a full power outage.

NFPA 101, Life Safety Code outlines the following schedule:

Monthly Testing - Ensure that the test button light is illuminated. Conduct a 30 second discharge test by depressing the test button. The LED load should operate at reduced output.

Annual Testing - Ensure that the test button is illuminated. Conduct a full 90 minute discharge test. The unit should operate as intended for the duration of the test.

“Written records of the testing shall be kept by the owner for inspection by the authority having jurisdiction.”